




GEZE ACCESSORIES FOR DOOR CLOSERS FROM COVER CAPS TO UPPER PIVOTS

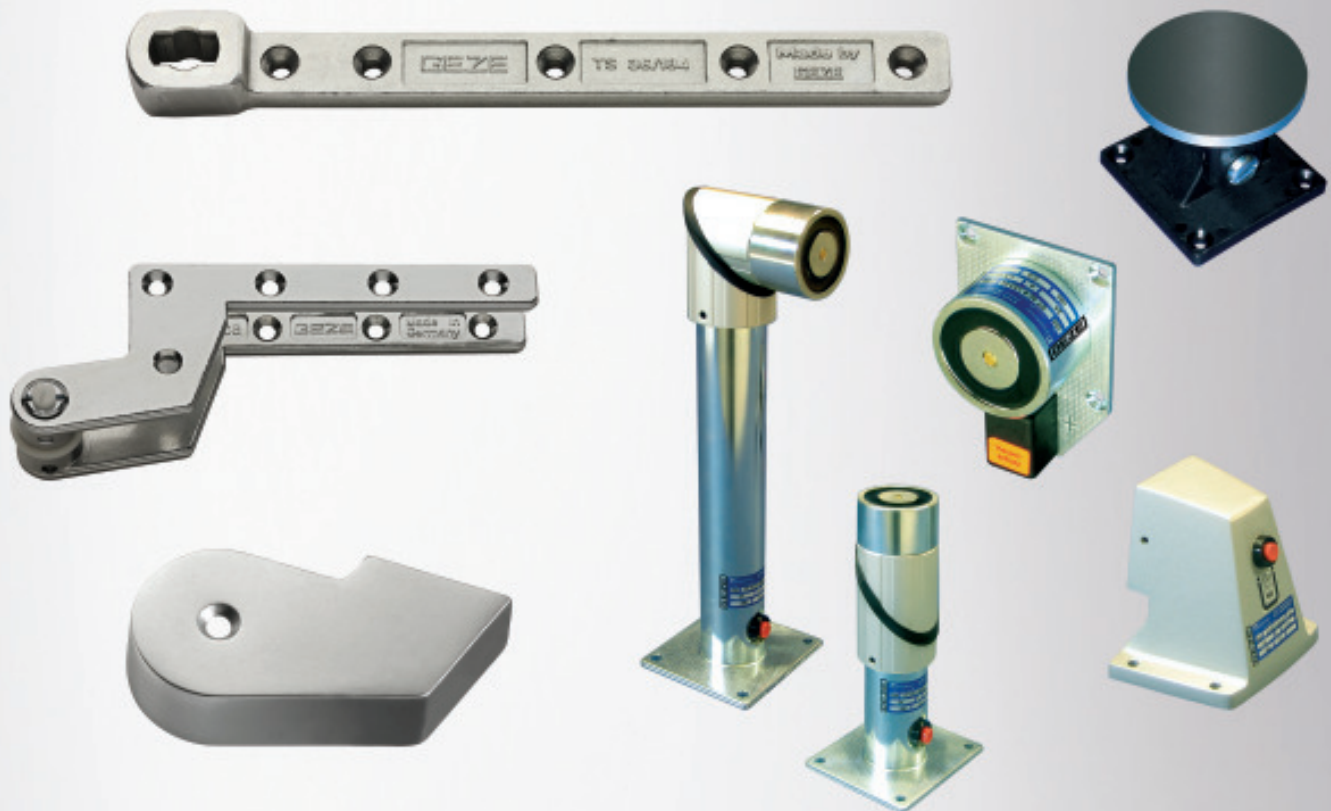

GEZE ACCESSORIES FOR DOOR CLOSERS

CONTENTS

Door shoes and upper pivots for single action doors	4
Cover caps for door shoes and upper pivots	7
Pivot bearing	8
Door shoes for double action doors	9
Upper pivots for double action doors	10
Smoke switch control unit RSZ 6	11
Smoke switch control unit RSZ 5	12
Smoke switch RS 5	13
Power supply unit RS 5/N	13
Smoke detector and power supply for multi-devices	14
Circuit breaker	15
Magnetic door clamps and counterplates	16
References	19

GEZE ACCESSORIES FOR DOOR CLOSERS

GEZE Door shoes and upper pivots for single action doors

Door shoe model DM

see Fig. 04-1

For bolting on.

Material: steel, drop-forged and galvanised.

With flat taper for almost every door system (on request).



Door shoe model DM



Door shoe and upper pivot model DB

Version	ID No.
with flat taper / with square socket	001068

Door shoe model DB

see Fig. 04-2

For screw attachment to rebated and flush timber doors or aluminium doors.

For welding on steel doors.

Material: steel, drop-forged and galvanised.

Version	ID No.
with flat taper	044579
with square socket	037581

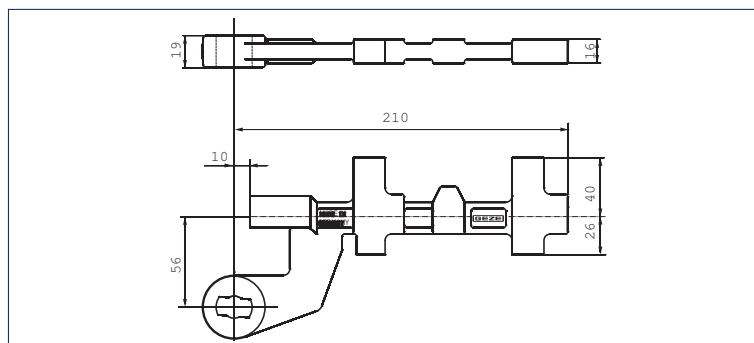


Fig. 04-1

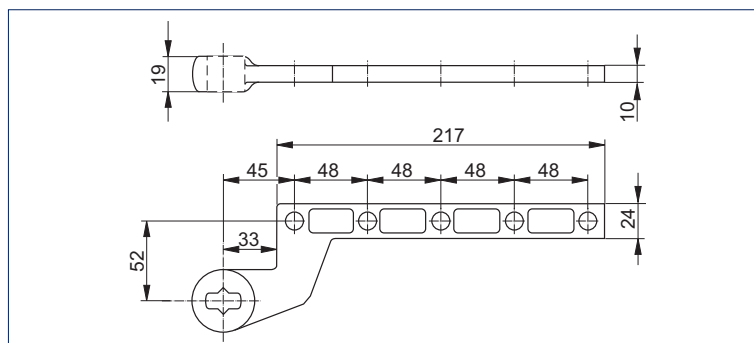


Fig. 04-2

Upper pivot model DB

see Fig. 04-3

Material: steel, drop-forged and galvanised.

Upper pivot pin length 45 mm.

Combination	ID No.
a	044676
b DIN left	044697
b DIN right	044680
c	044787

Do not use any ID No. with upper pivot pin lengths 41 or 49 mm in combination a,b,c

Installation dimensions	Combination		
	a	b	c
Dimension =	S	S	S
Pivot pin 41 mm without spacer ring	41	28,5	16
Pivot pin 45 mm without spacer ring	45	32,5	20
Pivot pin 49 mm without spacer ring	49	36,5	24

If combination and upper pivot pin length are not specified, combination a with 45 mm upper pivot pin will be supplied.

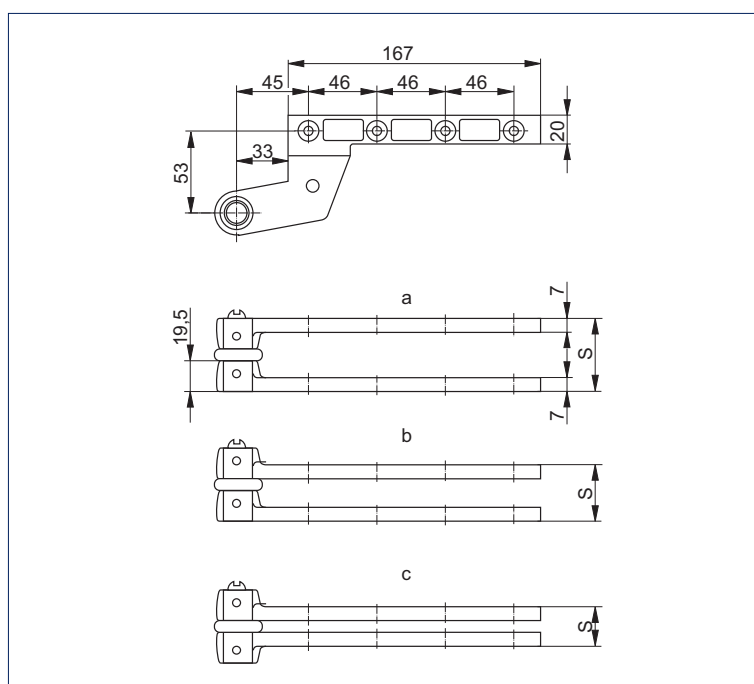


Fig. 04-3

GEZE ACCESSORIES FOR DOOR CLOSERS

GEZE Door shoes and upper pivots for single action doors

Door shoe model EK

see Fig. 05-1

For welding to steel doors.

Material: steel, drop-forged and galvanised.

Version	ID No.
with flat taper	008269
with square socket	006696



Door shoe model EK



Upper pivot model EK

Upper pivot model EK

see Fig. 05-2

Material: precision punched component

made of drawn steel, phosphated.

Upper pivot pin length 45 mm

Combination	ID No.
a	006719
b DIN left	000889
b DIN right	000890
c	000891

Do not use any ID No. with upper pivot pin lengths 41 or 49 mm in combination a,b,c

Installation dimensions	Combination		
	a	b	c
Dimension =	S	S	S
Pivot pin 41 mm without spacer ring	41	27	13
Pivot pin 45 mm without spacer ring	45	31	17
Pivot pin 49 mm without spacer ring	49	35	21

If combination and upper pivot pin length are not specified, combination a with 45 mm upper pivot pin will be supplied.

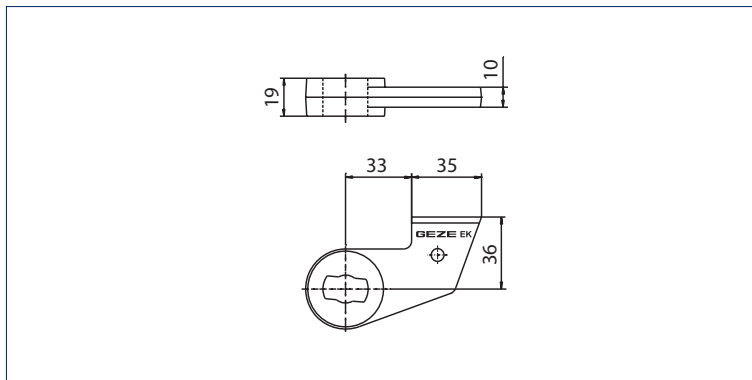


Fig. 05-1

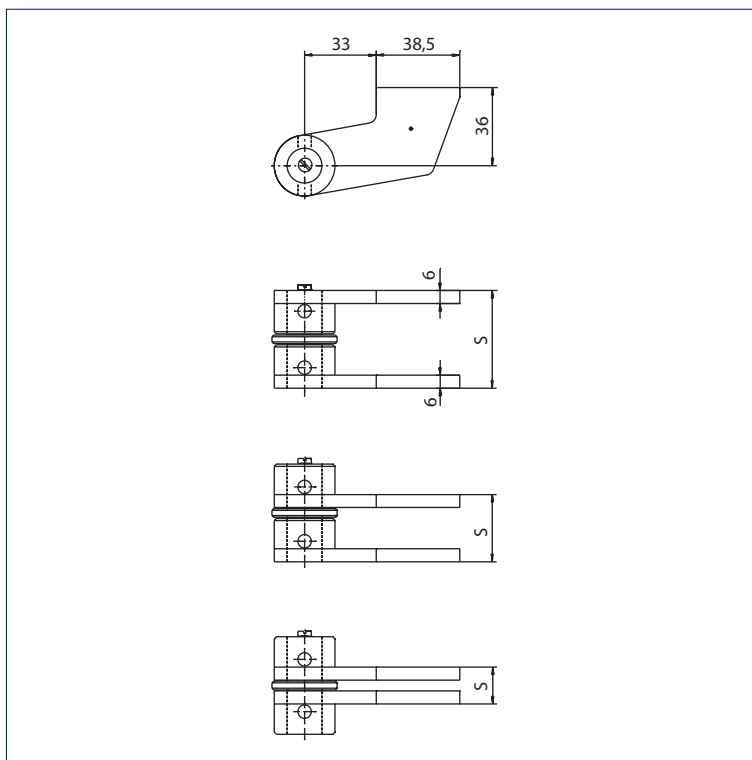


Fig. 05-2

GEZE ACCESSORIES FOR DOOR CLOSERS

GEZE Door shoes and upper pivot for single action doors

Door shoe model FK

see Fig. 06-1

For welding on steel doors.

Material: steel, drop-forged

Version	ID No.
with flat taper	008270
with square socket	006699



Door shoe model FK



Upper pivot model FK

Upper pivot model FK

see Fig. 06-2

Material: steel, drop-forged.

Upper pivot pin length 45 mm

Combination	ID No.
a	006724
b DIN left	000895
b DIN right	000896
c	000897

Do not use any ID No. with upper pivot pin lengths 41 or 49 mm in combination a,b,c

Installation dimensions	Combination		
	a	b	c
Dimension =	S	S	S
Pivot pin 41 mm without spacer ring	41	28	15
Pivot pin 45 mm without spacer ring	45	32	19
Pivot pin 49 mm without spacer ring	49	36	23

If combination and upper pivot pin length are not specified, combination a with 45 mm upper pivot pin will be supplied.

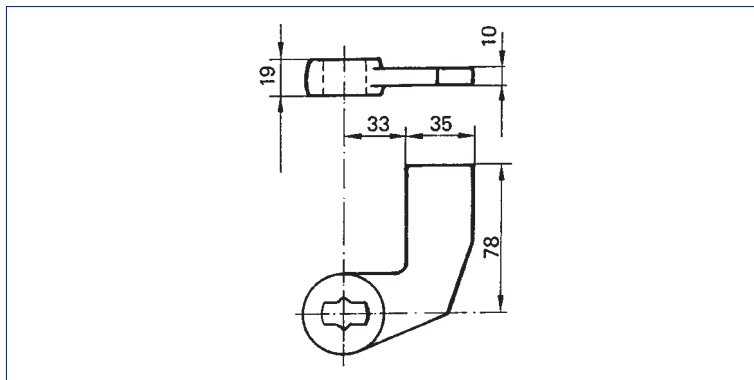


Fig. 06-1

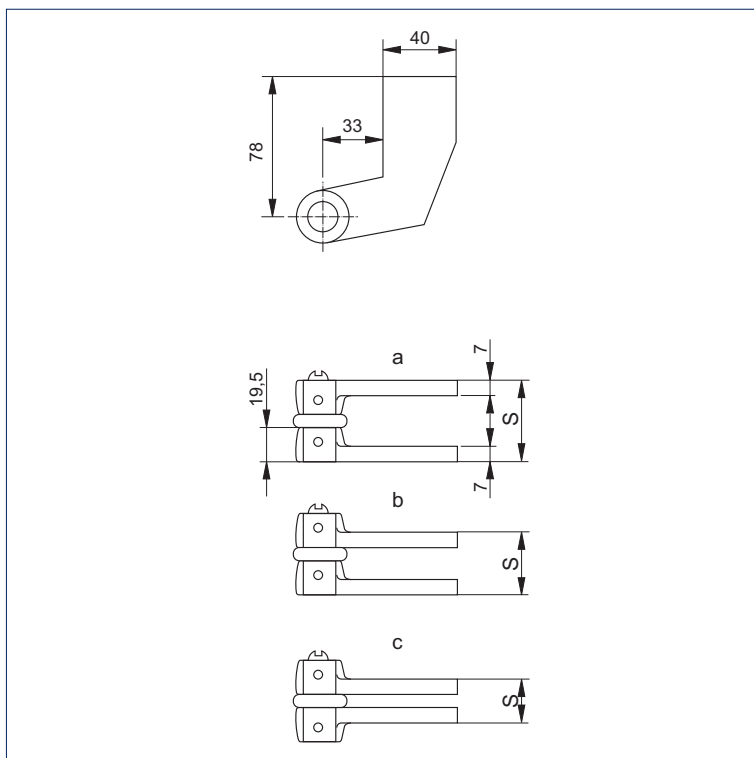


Fig. 06-2

GEZE ACCESSORIES FOR DOOR CLOSERS

GEZE Cover caps

Flush doors

Cover caps for door shoes

model DM, DB, EK, FK

see Fig. 07-1

Material	ID No. DIN left	ID No. DIN right
LM anodised EV1	006794	006798
stainless steel effect	137586	137577



Cover cap

Cover caps for upper pivots

model DB, EK, FK

see Fig. 07-2

Material	ID No.
LM anodised EV1	001090
stainless steel effect	137640

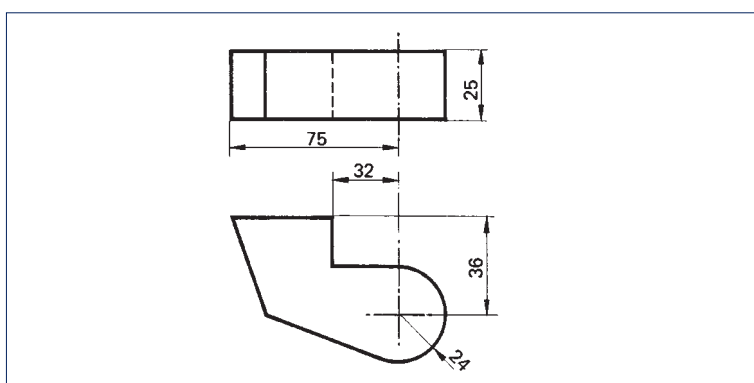


Fig. 07-1

Rebated doors

Cover caps for door shoes

model DM, DB, EK, FK ¹⁾

Material	ID No. DIN left	ID No. DIN right
LM anodised EV1	045196	045155
stainless steel effect	137618	137617

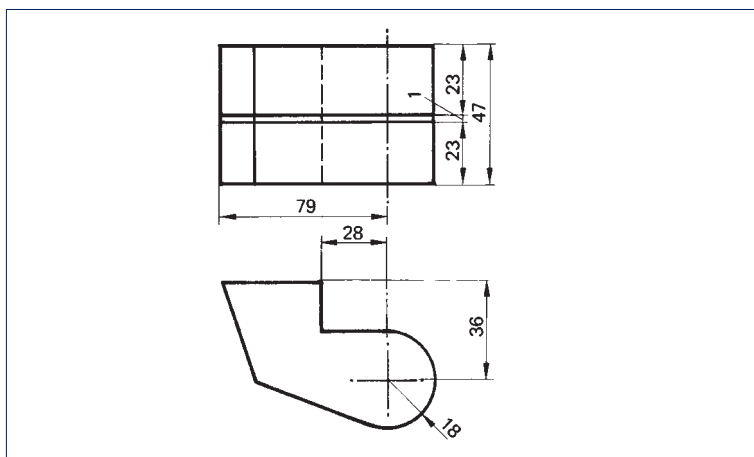


Fig. 07-2

Cover caps for upper pivots

model DM, DB, EK, FK ¹⁾

Material	ID No. DIN left	ID No. DIN right
LM anodised EV1	037918	038302
stainless steel effect	137641	137642

¹⁾ The cover caps for door rail and the lower part of the hinge have been shortened by 14 mm for the installation into rebated doors.

GEZE ACCESSORIES FOR DOOR CLOSERS

GEZE Pivot bearing

Pivot bearing with flat taper

see Fig. 09-1

Version	ID No.
Pivot bearing GEZE TS 137 b	009788

70 x 70 mm with square spindle
Max. door weight 250 kg

Pivot bearing with square socket

Version	ID No.
Pivot bearing GEZE TS 32 b	010556

70 x 70 mm with square spindle
Max. door weight 250 kg

Both pivot bearings are available with 5 mm extended spindle.

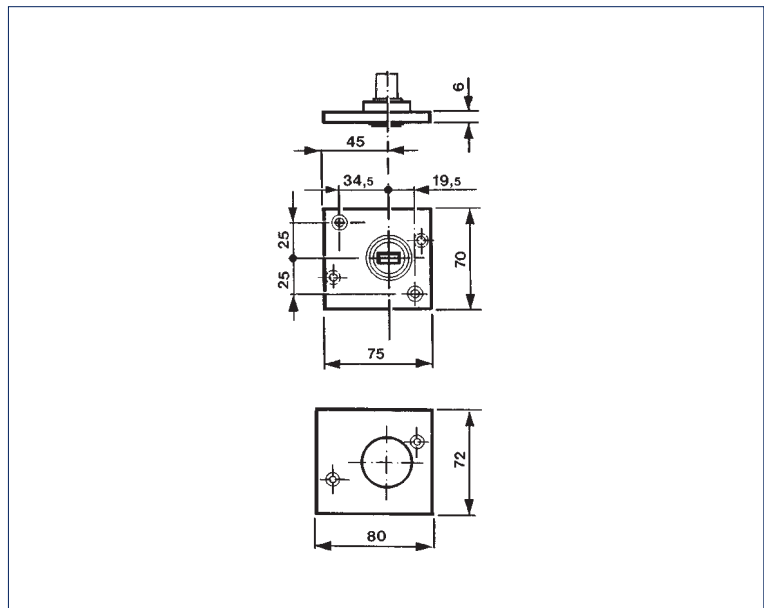


Fig. 09-1

Cover plate

Version	ID No.
Cover plate for pivot bearing	012846

80 x 72 mm with square spindle
with square socket / flat taper
Material: stainless steel

GEZE ACCESSORIES FOR DOOR CLOSERS

GEZE Door shoes for double action doors

Door shoe model CM

see Fig. 10-1

For aluminium doors.

Material: steel, drop-forged and galvanised
for almost every door system (on request)

Version	ID No.
with flat taper	001067

Door shoe model C

see Fig. 10-2

For metal and timber doors.

Material: steel, drop-forged

Version	ID No.
with flat taper	007432

Door shoe model S

see Fig. 10-3

For welding on steel doors.

Material: steel

Version	ID No.
with flat taper	007434



Door shoe model C



Door shoe model S

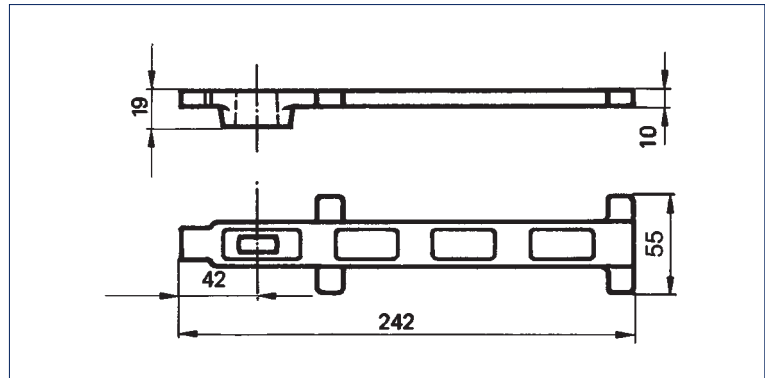


Fig. 10-1

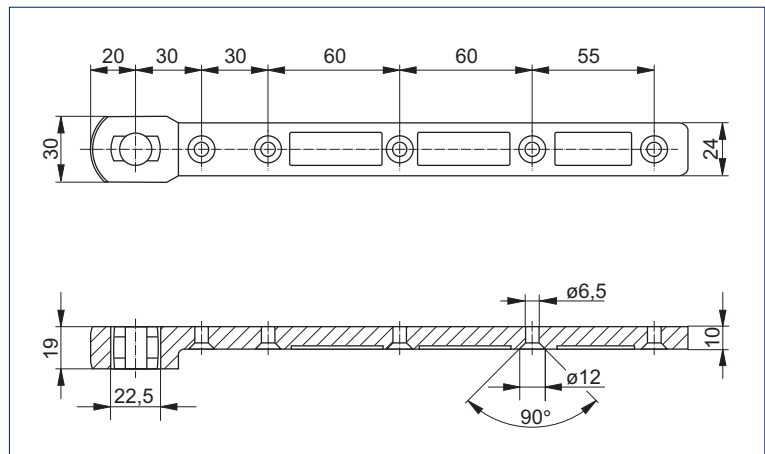


Fig. 10-2

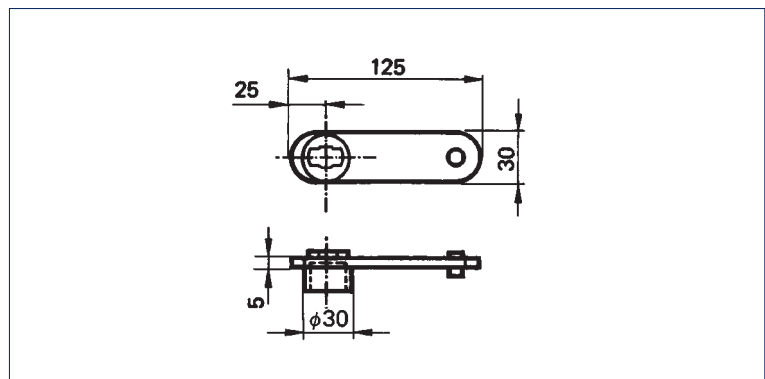


Fig. 10-3

GEZE ACCESSORIES FOR DOOR CLOSERS

GEZE Upper pivots for double action doors

Upper pivot model B

see Fig. 11-1

suitable for door shoe model CM, C and S

Description	Pivot pin	ID No.
Adjustable upper pivot model B	43 mm	006371
	55 mm	000108
	65 mm	000903



Upper pivot model B



Upper pivot model C

Upper pivot model C

see Fig. 11-2

suitable for door shoe model CM, C and S

Description	Pivot pin	ID No.
Adjustable upper pivot model C	43 mm	006666
	55 mm	000905
	65 mm	000904

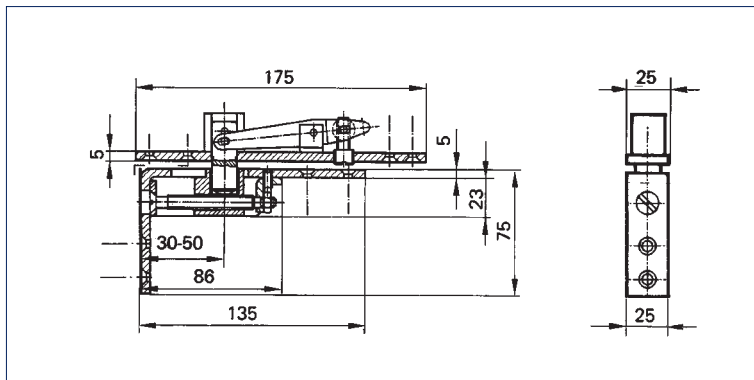


Fig. 11-1

Cover plate for top of upper pivots model B and C

Version	ID No.
LM satin	006375
LM anodised EV1	006376
LM anodised dark bronze	000876

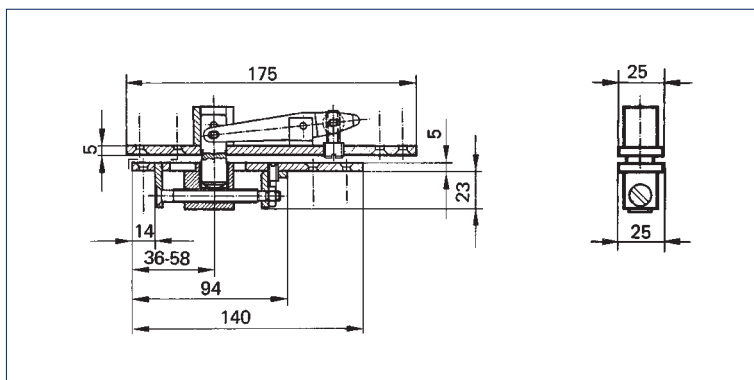


Fig. 11-2

Front plate for bottom of upper pivot model B

Version	ID No.
LM satin	006667
LM anodised EV1	006669
LM anodised dark bronze	000878

Smoke switch control unit GEZE RSZ 6

Smoke switch control unit RSZ 6
Certification No. Z-6.5-1755

with adaption of the alarm threshold and
soiling indicator

Dimensions, see Fig. 12-1

Connection diagram, see Fig. 12-2

The smoke switch control unit GEZE RSZ 6 with integrated 24 V DC power supply unit is both a smoke detector for early detection of fire and also a smoke switch to actuate hold-open systems for fire protection barriers.

The RSZ 6 can be used for both door closers with hold-open device and magnetic clamps. It is possible to connect additional smoke switches.

Voltage supply 230 V AC,
UP (flush mounted)

Mounting

Fig. 13-2 is showing the mounting of both RSZ 6/RSZ 5 smoke switch control units. The smoke switch control unit should only be mounted to the vertical wall above the door opening.

Connection diagram

RSZ 6 with smoke switch ORS142,
see Fig. 12-3

Electrical data

- Smoke detection – optical scattered light principle
- Operation voltage 230 V AC, 50 Hz, 6.3 W
- Total connected load for door closer/magnetic clamp max. 200 mA
- Ambient temperature 0° to +50° C
- Short-circuit proof
- Enclosure rating IP20



Smoke switch control unit RSZ 6

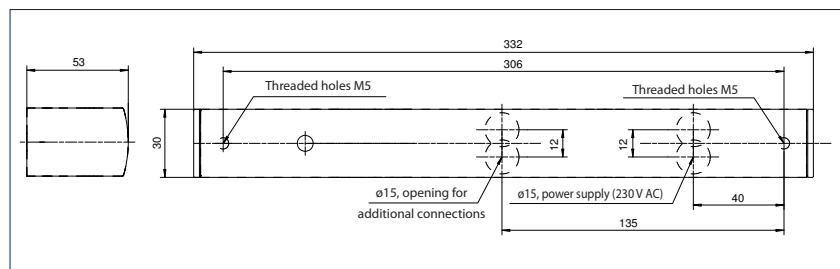


Fig. 12-1

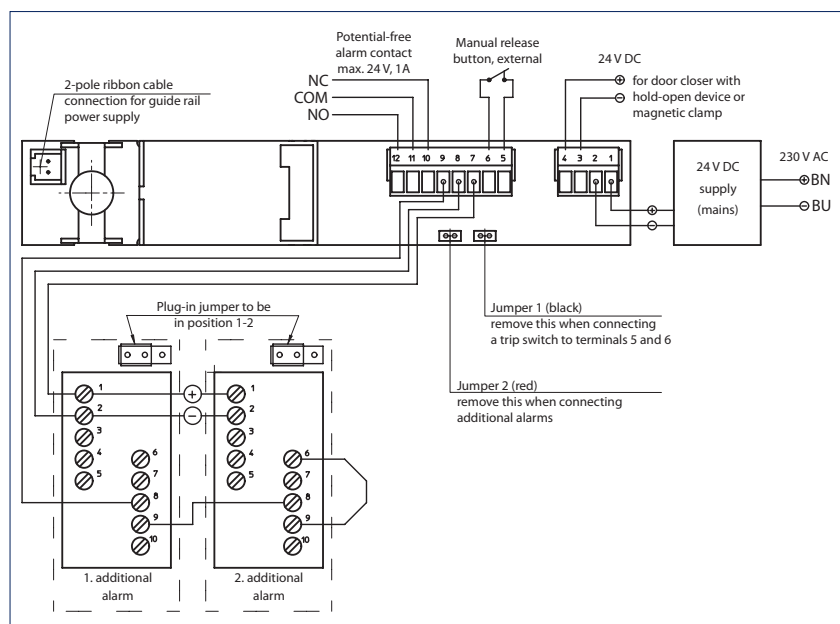


Fig. 12-2

Smoke switch control unit GEZE RSZ 6

Version	ID No.
silver	099851
dark bronze	099857
white RAL 9016	099858
RAL colour	099859

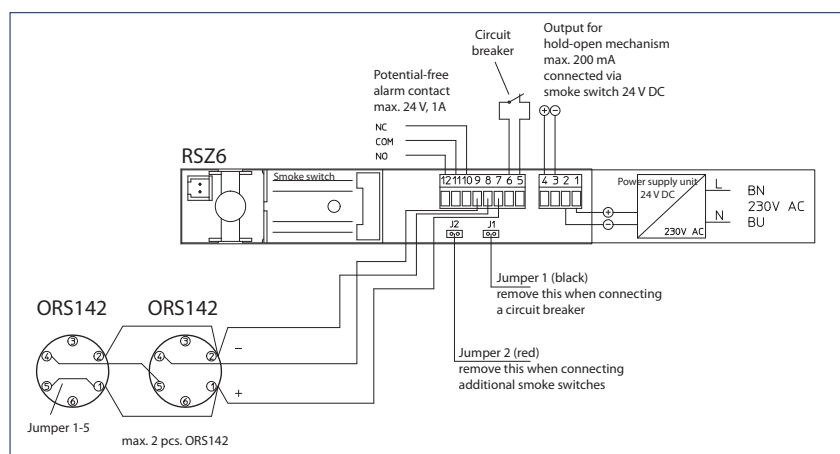


Fig. 12-3

GEZE ACCESSORIES FOR DOOR CLOSERS

Smoke switch control unit GEZE RSZ 5

Smoke switch control unit RSZ 5

Certification No. Z-6.5-1508

Dimensions, see Fig. 13-1

The GEZE RSZ 5 smoke switch control unit with integrated 24 V DC power supply unit is both a smoke detector for early detection of fire and also a smoke switch to actuate hold-open systems for fire protection barriers.

The RSZ 5 can be used for both door closers with hold-open device and magnetic clamps. It is possible to connect additional smoke switches.

Voltage supply 230 V AC, either AP (surface-mounted) or UP (flush-mounted)

Mounting

Fig. 13-2 is showing the mounting of both RSZ 6/RSZ 5 smoke switch control units. The smoke switch control unit should only be mounted to the vertical wall above the door opening.

Electrical data

- Smoke detection – optical scattered light principle
- Operation voltage 230 V AC, 80 mA, 50 Hz
- Total connected load max. 230 mA
- Ambient temperature -5° to +50° C
- Fuse T 315 mA „L“
- Enclosure rating IP20

Smoke switch control unit GEZE RSZ 5

Version	ID No.
silver	028357
dark bronze	028960
white RAL 9016	028961
RAL colour	028962

Legend Fig. 13-3

- 1 Mains supply (power detection unit RS 5/N)
- 2 Smoke detection unit
- 3 Status display LED green
- 4 Alarm display LED red
- 5 Potential-free contact to external smoke detection display
- 6 Plug-in jumper
- 7 Connection of additional smoke switches (max. 2 pcs.) GEZE RS 5
- 8 Connection for door closer with hold-open device and magnetic clamp



Smoke switch control unit RSZ 5

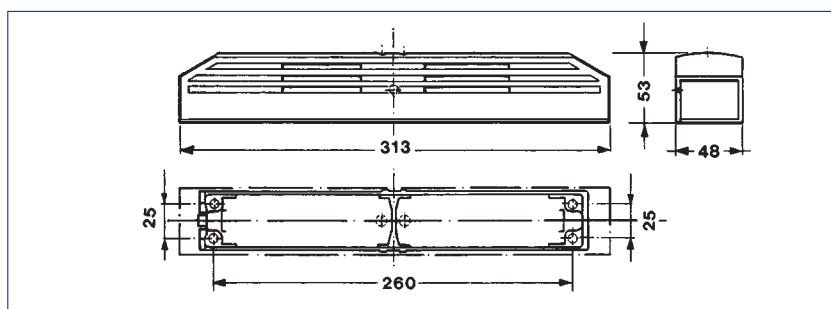


Fig. 13-1

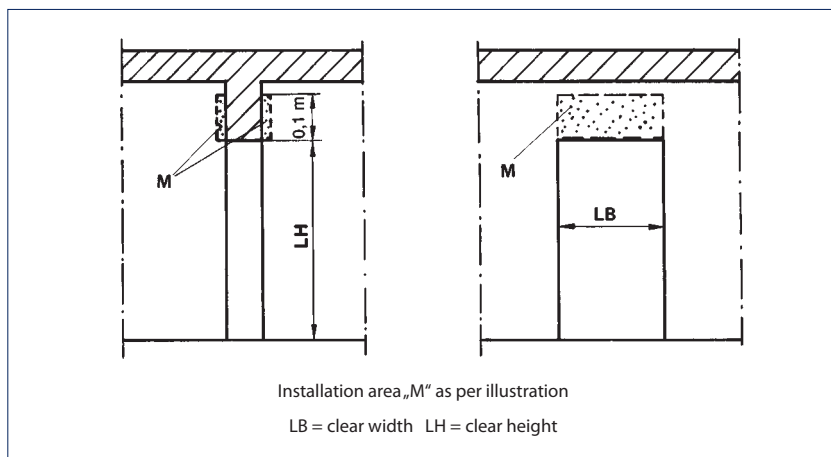


Fig. 13-2

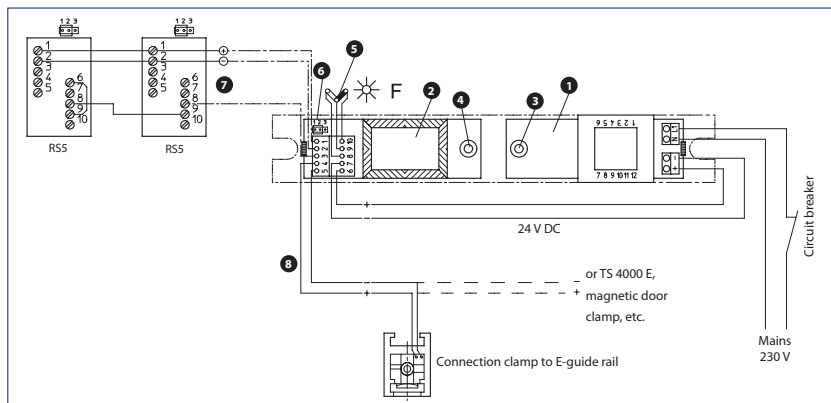


Fig. 13-3

GEZE ACCESSORIES FOR DOOR CLOSERS

GEZE Smoke switch RS 5 and power supply unit RS 5/N

Smoke switch GEZE RS 5

Certification No. Z-6.5-1508

Dimensions, see Fig. 14-1

The GEZE RS 5 smoke switch is a smoke detector for the early detection of fire. When smoke is detected (optical scattered light principle) the switch interrupts the power supply for the door closer hold-open. The RS 5 can be used for both door closers with hold-open device and magnetic clamps. Voltage supply 24 V DC, either AP (surface-mounted) or UP (flush-mounted)

Version RS 5	ID No.
silver	027052
dark bronze	028939
white RAL 9016	028940
RAL colour	028941

Power supply unit GEZE RS 5/N

Certification No. Z-6.5-1508

Dimensions, see Fig. 14-1

The GEZE RS 5/N is used to supply power to the RS 5 smoke switch and door closer with hold-open device or magnetic clamp.

Electrical data

- Power supply cable 2 x 1,5 mm²
230 V AC, 80 mA, 50 Hz
- Output voltage 24 V DC
- Output current max. 250 mA
- Ambient temperature -5° to +50° C

Version RS 5/N	ID No.
silver	027053
dark bronze	028950
white RAL 9016	028951
RAL colour	028952

Connection diagram RS 5, see Fig. 14-2

- Smoke detection unit
- Alarm display LED red
- Potential-free contact to external smoke detection display
- Plug-in jumper
- Connection 1 additional smoke switch RS 5
- Connection for door closer with hold-open device or magnetic clamp

Connection diagram RS 5/N, see Fig. 14-3

- Mains supply
- Status display LED green



Smoke switch RS 5 and power supply unit RS 5/N

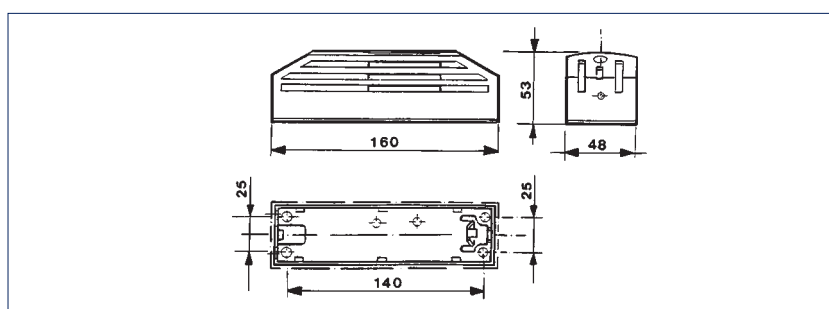


Fig. 14-1

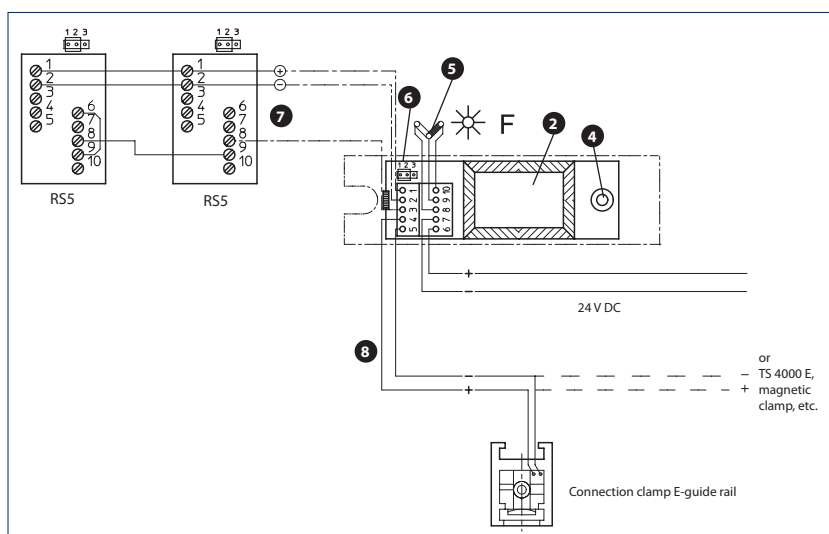


Fig. 14-2

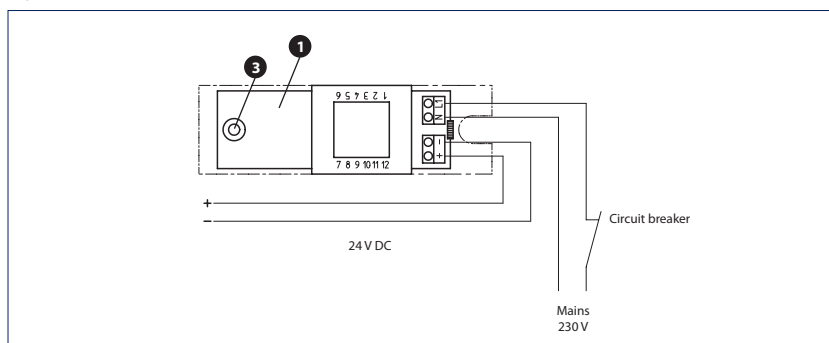


Fig. 14-3

GEZE ACCESSORIES FOR DOOR CLOSERS

GEZE Smoke detector and power supply for multi-devices

GEZE Smoke detector Type 142/24 V DC

Dimensions, see Fig. 15-1

The GEZE smoke detector type 142 is used for the early detection of fire. An additional temperature detector reacts with an ambient temperature of 70°C.

The optical detector functions are according to the scattered light principle. The inside of the smoke detector contains a labyrinth-like structure into which a measuring light beam is pulsed. If smoke has penetrated the smoke detector, any reflection of this measuring light beam is detected by a photosensitive element and the alarm is raised.

A protruding product feature of the smoke switch is its long lifespan. Further it is equipped with an alarm threshold and with a self-learning soiling indicator. The status is permanently shown on the outside of the smoke switch by a multi-coloured LED.

- Power consumption 0,6 W

Version	ID No.
Smoke detector Type 142 with socket	091273

Layout of clamps within smoke switch socket, see Fig. 15-1 and 15-3

- 1 18 V DC up to 28 V DC
- 2 GND (OV)
- 3 Communication interface
- 4 Relay contact
- 5 Relay contact
- 6 Supporting clamp

GEZE Power supply and actuation unit NAG03/24 V

Dimensions, see Fig. 15-2

Connection of several smoke switches type 142 and hold-open devices, e.g. GEZE magnetic clamp or door closer with integrated electrical hold-open up to max. 21 W.

Electrical data

- Mains voltage 230 V AC, 50 Hz
- Output voltage 24 V DC
- Output power 21 W
- Output current 0,9 A
- Enclosure rating IP30
- Fuse 0,9 A electronic

Version	ID No.
NAG 03, white	103403



Smoke detector Type 142/24 V DC

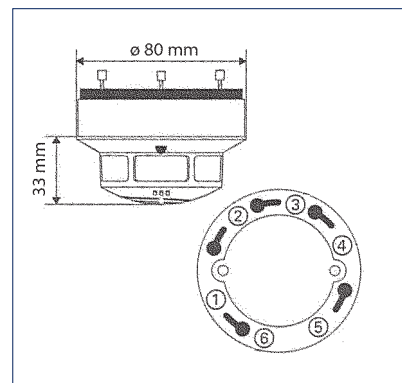


Fig. 15-1



Power supply and actuation unit NAG 03/24 V DC

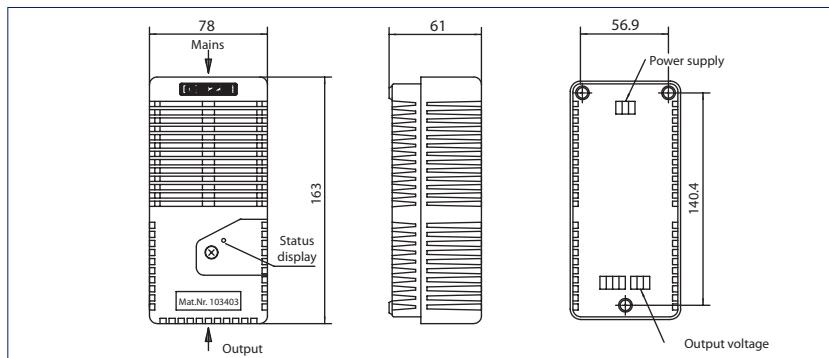


Fig. 15-2

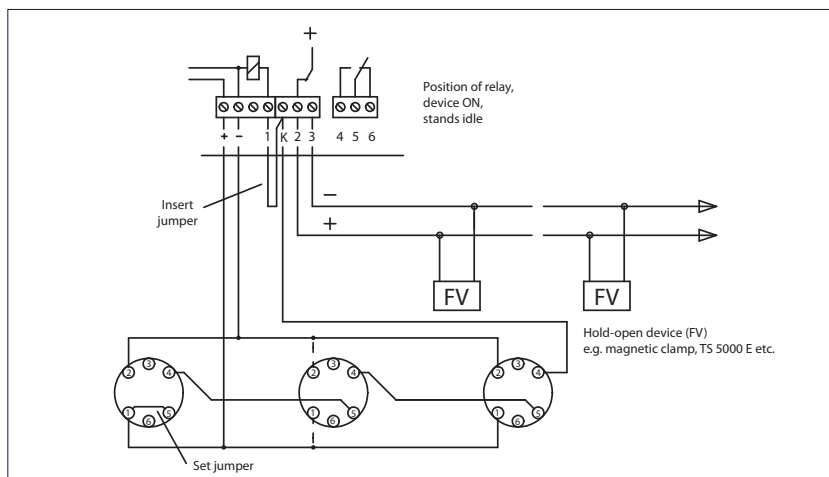


Fig. 15-3

GEZE ACCESSORIES FOR DOOR CLOSERS

GEZE Circuit breaker and GEZE Magnetic door clamps

GEZE Circuit breaker


The circuit breaker is used for manual tripping of magnetic clamp or electrically actuated door closers.

- 1-pole change-over contact
- Switching voltage max. 250 V AC
- Switching current approx. 500 mA
- Dimensions 80 x 80 x 9 mm

Version	ID No.
Circuit breaker, flush-mounted	116266
Box for surface-mounted version	120503



Circuit breaker

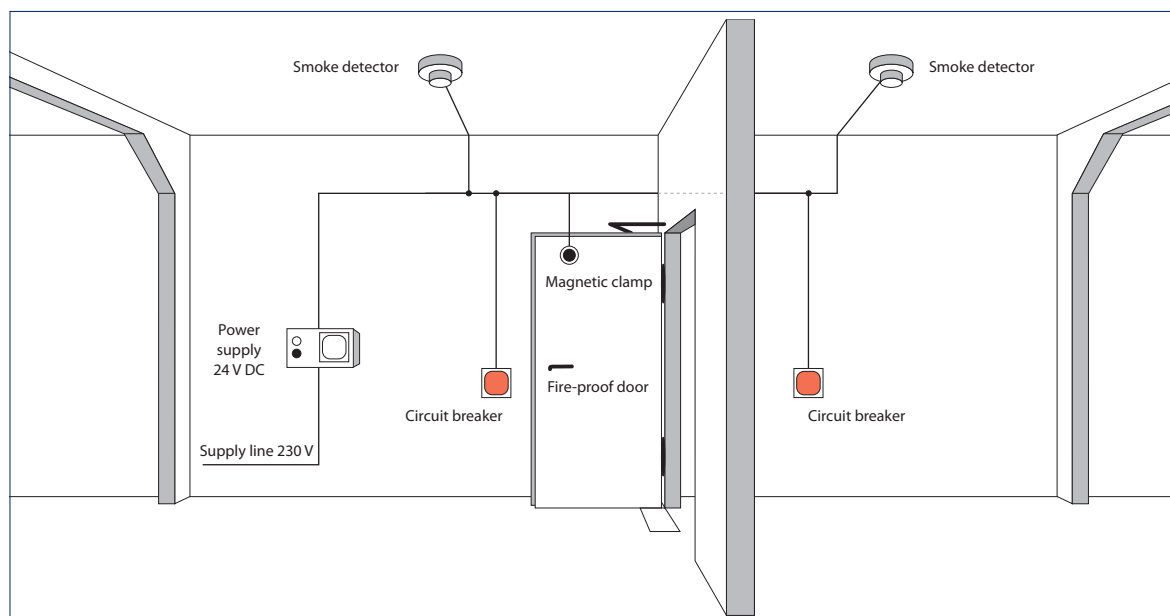

GEZE Magnetic door clamps

Electromagnetic door clamps are used for holding open fire doors. They must be connected to a smoke detection system which, in the event of fire, interrupts the clamping power supply. The door is then released and is closed by the door closer.

The door clamps are actuated via the smoke switch control units GEZE RSZ 6, GEZE RSZ 5 and via the power supply and actuation unit for multi-devices GEZE NAG 03.

It is also possible to release the door from its hold-open position using circuit breakers which also shut off the clamping power supply.



Magnetic clamp, length = 335 mm



Magnetic clamp, length = 335 mm

Max. opening angle has to be limited with a separate door stop!

GEZE ACCESSORIES FOR DOOR CLOSERS

GEZE Magnetic door clamps and counterplates

approved by DIBt with RSZ 5, RSZ 6 and smoke detector and power supply for multi-devices NAG03

Product features for all GEZE magnetic clamps

- Operation voltage 24 V DC $\pm 10\%$
- Current consumption approx. 60 mA
- Power consumption approx. 1,5 Watt
- Clamping force approx. 490 N


GEZE magnetic door clamps are listed as hold-open mechanism named GT50 R in the certification RSZ 5, RSZ 6 and smoke detector and power supply for multi-devices NAG03.

Full-metall magnetic clamp with integrated circuit breaker

Magnetic head and spacer galvanised for wall mounting and floor mounting with tilting magnetic head

see Fig. 17-1 and 17-2

Version	ID No.
with basic length 185 mm	115952
with basic length 335 mm	115953

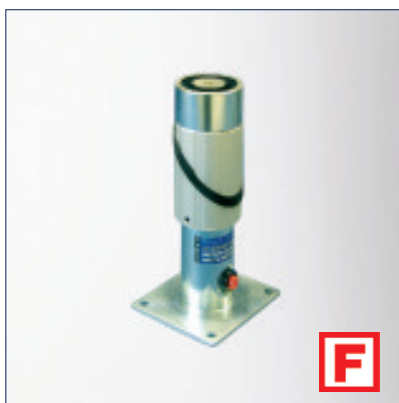

Magnetic clamp, length = 185 mm



Magnetic clamp, length = 185 mm

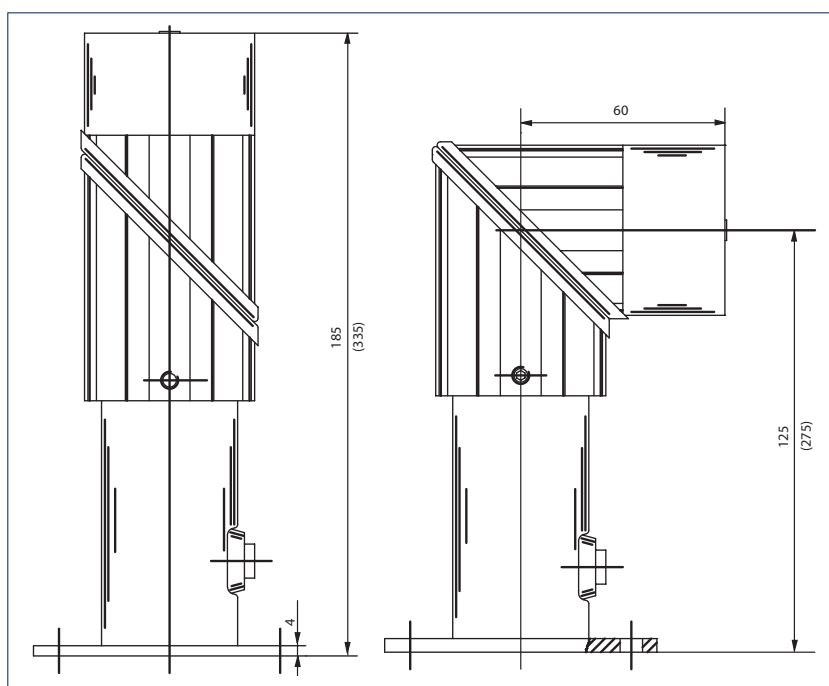


Fig. 17-1

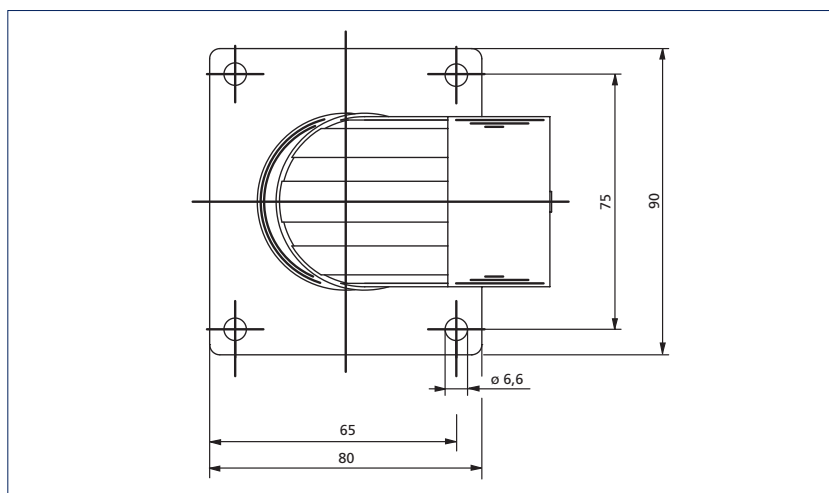



Fig. 17-2

GEZE ACCESSORIES FOR DOOR CLOSERS


GEZE Magnetic door clamps and counterplates



Magnetic clamp, basic model

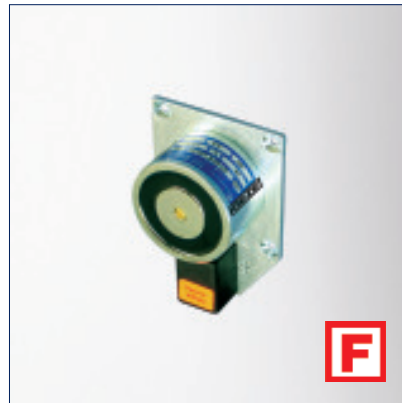

Magnetic clamp, wall mounting

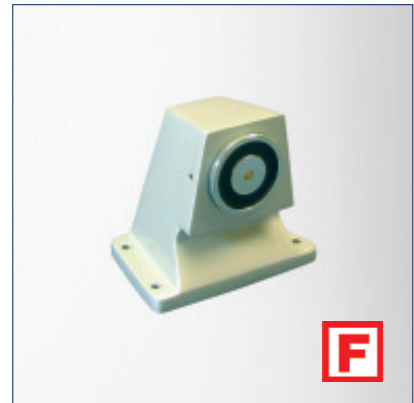

Magnetic clamp, floor mounting

GEZE Magnetic clamps

Magnetic clamp basic model

Magnetic head galvanised
(without base plate)
for wall mounting or installation in an
arbitrary construction, see Fig. 18-1

Magnetic clamp wall mounting

with base plate, see Fig. 18-2

Magnetic clamp floor mounting

with aluminium housing
and integrated circuit breaker, see Fig. 18-3

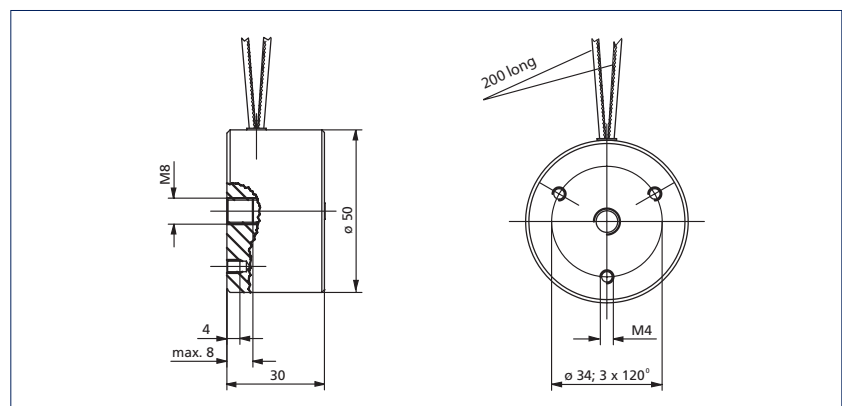


Fig. 18-1

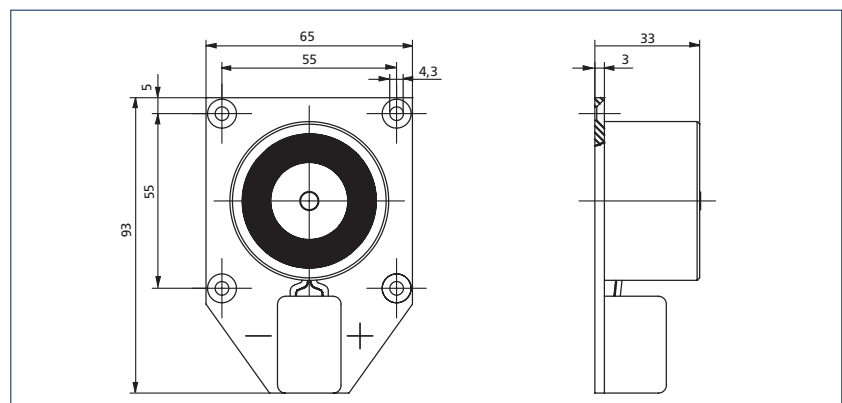


Fig. 18-2


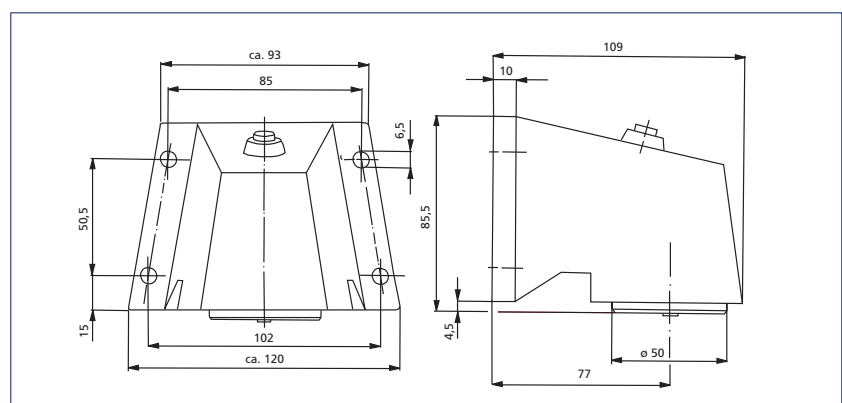


Fig. 18-3

Version	ID No.
Magnetic clamp basic model	115830
Magnetic clamp wall mounting	115829
Magnetic clamp floor mounting	115951

GEZE ACCESSORIES FOR DOOR CLOSERS

GEZE Magnetic door clamps and counterplates

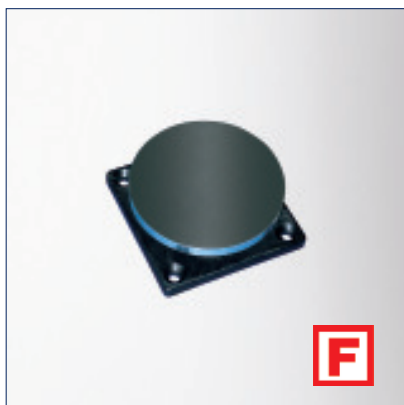

Counterplate standard version



Counterplate with spring compensation



Counterplate with joint

GEZE Counterplates

The counterplates are the compensation parts to the magnetic door clamps. They are mounted to the door leaf and connect to the door and magnetic clamp electro-magnetically.

Counterplate standard model

on mounting plate with spring for levelling with magnetic clamp, see Fig. 19-1

Counterplate with spring compensation

on mounting housing with damping spring for smooth action on heavy doors, see Fig. 19-2

Counterplate with joint

on mounting plate with additional adjustment for extreme angle between door and magnetic clamp, see Fig. 19-3

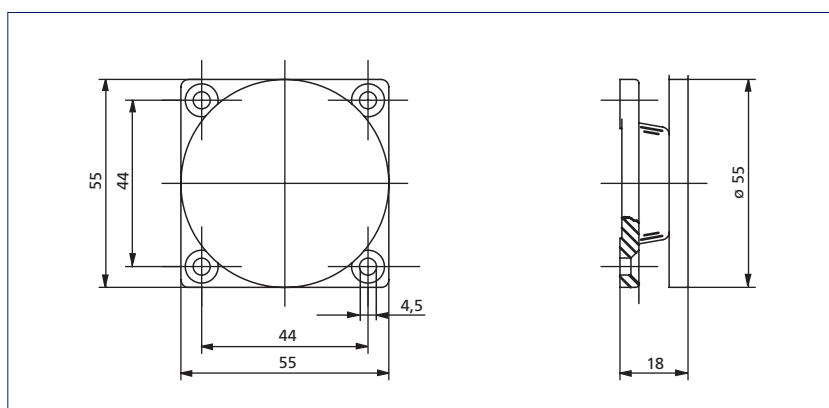


Fig. 19-1

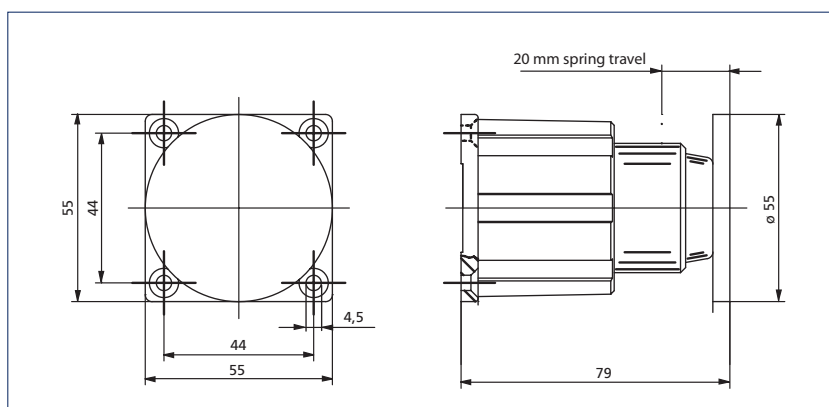


Fig. 19-2

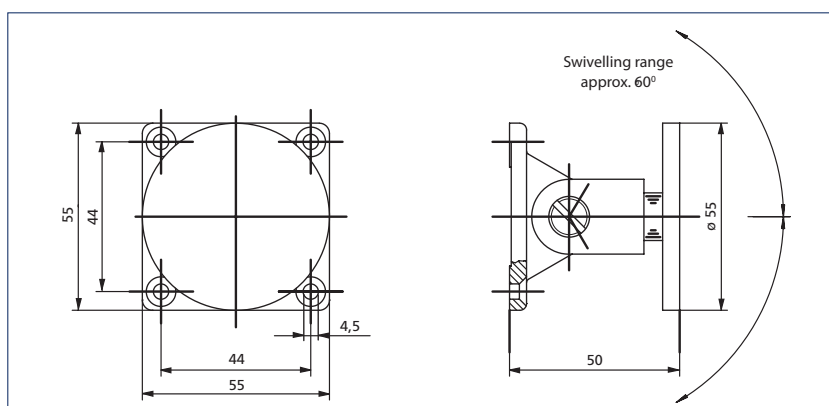


Fig. 19-3

Version	ID No.
Counterplate standard version	115954
Counterplate with spring compensation	115955
Counterplate with joint	115956

GEZE ACCESSORIES FOR DOOR CLOSERS

References



Catholic church, Stuttgart



Rheinlandhaus, Köln

GEZE GmbH
P.O. Box 1363
71226 Leonberg
Germany

GEZE GmbH
Reinhold-Vöster-Straße 21-29
71229 Leonberg
Germany

Telefon +49 (0) 7152-203-0
Telefax +49 (0) 7152-203-310

www.geze.com

Germany

GEZE Sonderkonstruktionen GmbH
Planken 1
97944 Boxberg-Schweigern
Tel. +49 (0) 7930-92 94-0
Fax +49 (0) 7930-92 94-10
E-Mail: sk.de@geze.com

GEZE GmbH
Niederlassung Nord/Ost
Bühningstraße 8
13086 Berlin (Weissensee)
Tel. +49 (0) 30-47 89 90-0
Fax +49 (0) 30-47 89 90-17
E-Mail: berlin.de@geze.com

GEZE GmbH
Niederlassung West
Nordsternstraße 65
45329 Essen
Tel. +49 (0) 201-83 082-0
Fax +49 (0) 201-83 082-20
E-Mail: essen.de@geze.com

GEZE GmbH
Niederlassung Mitte
Adenauerallee 2
61440 Oberursel (b. Frankfurt)
Tel. +49 (0) 6171-63 610-0
Fax +49 (0) 6171-63 610-1
E-Mail: frankfurt.de@geze.com

GEZE GmbH
Niederlassung Süd
Breitwiesenstraße 8
71229 Leonberg
Tel. +49 (0) 7152-203-594
Fax +49 (0) 7152-203-438
E-Mail: leonberg.de@geze.com

GEZE Service GmbH NL Südwest
Reinhold-Vöster-Straße 25
71229 Leonberg
Tel. +49 (0) 7152-92 33 34

GEZE Service GmbH NL Nord-Ost
Bühningstraße 8
13086 Berlin (Weissensee)
Tel. +49 (0) 30-47 02 17 32

GEZE Service GmbH NL West
Nordsternstraße 65
45329 Essen
Tel. +49 (0) 201-8 30 82 16

GEZE Service GmbH NL Mitte
Feldbergstrasse 59
61440 Oberursel
Tel. +49 (0) 6171-63 327-0

GEZE Service GmbH NL Süd
Keltenring 10
85658 Eggening
Tel. +49 (0) 8095-87 13 61

Austria

GEZE Austria
Wiener Bundesstrasse 85
A-5300 Hallwang
Tel: +43/6225/87180
Fax: +43/6225/87180-299
E-Mail: austria.at@geze.com

Baltic States

GEZE GmbH Baltic States office
Dzelzavas iela 120 S
1021 Riga
Tel. +371 (0) 67 89 60 35
Fax +371 (0) 67 89 60 36
E-Mail: office-latvia@geze.com

Benelux

GEZE Benelux B.V.
Leemkuil 1
Industrieterrein Kapelbeemd
5626 EA Eindhoven
Tel. +31 (0) 40-26 290-80
Fax +31 (0) 40-26 290-85
E-Mail: benelux.nl@geze.com

Bulgaria

GEZE Bulgaria - Trade
Representative Office
61 Pirinski Prohod, entrance „B“,
4th floor, office 5,
1680 Sofia
Tel. +359 (0) 24 70 43 73
Fax +359 (0) 24 70 62 62
E-Mail: office-bulgaria@geze.com

China

GEZE Industries (Tianjin) Co., Ltd.
Shuangchenzhong Road
Beichen Economic Development
Area (BEDA)
Tianjin 300400, P.R. China
Tel. +86 (0) 22-26 97 39 95-0
Fax +86 (0) 22-26 97 27 02
E-Mail: Sales-info@geze.com.cn

GEZE Industries (Tianjin) Co., Ltd.
Branch Office Shanghai
Unit 25N, Cross Region Plaza
No 899, Ling Ling Road,
Xuhui District
200030 Shanghai, P.R. China
Tel. +86 (0) 21-523 40 960
Fax +86 (0) 21-644 72 007
E-Mail: chinasales@geze.com.cn

GEZE Industries (Tianjin) Co., Ltd.
Branch Office Guangzhou
Room 17C3
Everbright Bank Building, No.689
Tian He Bei Road
510630 Guangzhou
P.R. China
Tel. +86 (0) 20-38 73 18 42
Fax +86 (0) 20-38 73 18 34
E-Mail: chinasales@geze.com.cn

GEZE Industries (Tianjin) Co., Ltd.
Branch Office Beijing
Room 1001, Tower D
Sanlitun SOHO
No. 8, Gongti North Road,
Chaoyang District
100027 Beijing, P.R.China
Tel. +86 (0) 10-59 35 93 00
Fax +86 (0) 10-59 35 93 22
E-Mail: chinasales@geze.com.cn

France

GEZE France S.A.R.L.
ZAC de l'Orme Rond
RN 19
77170 Servon
Tel. +33 (0) 1-60 62 60-70
Fax +33 (0) 1-60 62 60-71
E-Mail: france.fr@geze.com

Hungary

GEZE Hungary Kft.
Bartók Béla út 105-113.
Budapest
H-1115
Tel. +36 (1) 481 4670
Fax +36 (1) 481 4671
E-Mail: office-hungary@geze.com

Iberia

GEZE Iberia S.R.L.
Pol. Ind. El Pla
C/Comerc, 2-22, Nave 12
08980 Sant Feliu de Llobregat
(Barcelona)
Tel. +34 9-02 19 40 36
Fax +34 9-02 19 40 35
E-Mail: info@geze.es

India

GEZE India Private Ltd.
MF 2 & 3, Guindy Industrial Estate
Ekkattuthangal
Chennai 600 097
Tamilnadu
Tel. +91 (0) 44 30 61 69 00
Fax +91 (0) 44 30 61 69 01
E-Mail: office-india@geze.com

Italy

GEZE Italia Srl
Via Giotto, 4
20040 Cambiago (MI)
Tel. +39 (0) 29 50 695-11
Fax +39 (0) 29 50 695-33
E-Mail: italia.it@geze.com

GEZE Engineering Roma Srl
Via Lucrezia Romana, 91
00178 Roma
Tel. +39 (0) 6-72 65 311
Fax +39 (0) 6-72 65 3136
E-Mail: roma@geze.biz

Poland

GEZE Polska Sp.z o.o.
ul. Annapol 21
03-236 Warszawa
Tel. +48 (0) 22 440 4 440
Fax +48 (0) 22 440 4 400
E-Mail: geze.pl@geze.com

Romania

GEZE Romania s.r.l.
IRIDE Business Park,
Str. Dimitrie Pompeiu nr. 9-9a,
Building 10, Level 2, Sector 2,
020335 Bucharest
Tel.: +40 (0) 21 25 07 750
Fax: +40 (0) 21 25 07 750
E-Mail: office-romania@geze.com

Russian Federation

GEZE GmbH Representative
Office Russia
Kolodesnij pereulok3, str. 25
Office Nr. 5201-5203
107076 Moskau
Tel. +7 (0) 49 55 89 90 52
Fax +7 (0) 49 55 89 90 51
E-Mail: office-russia@geze.com

Scandinavia – Sweden

GEZE Scandinavia AB
Mallslingan 10
Box 7060
18711 Täby, Sweden
Tel. +46 (0) 8-7323-400
Fax +46 (0) 8-7323-499
E-Mail: sverige.se@geze.com

Scandinavia – Norway

GEZE Scandinavia AB avd. Norge
Industriveien 34 B
2073 Dal
Tel. +47 (0) 639-57 200
Fax +47 (0) 639-57 173
E-Mail: norge.se@geze.com

Scandinavia – Finland

Branch office of GEZE Scandinavia AB
Herralantie 824
Postbox 20
15871 Hollola
Tel. +358 (0) 10-40 05 100
Fax +358 (0) 10-40 05 120
E-Mail: finland.se@geze.com

Scandinavia – Denmark

GEZE Danmark
Branch office of GEZE Scandinavia AB
Mårkærvej 13 J-K
2630 Taastrup
Tel. +45 (0) 46-32 33 24
Fax +45 (0) 46-32 33 26
E-Mail: danmark.se@geze.com

South Africa

DCLSA Distributors (Pty.) Ltd.
118 Richards Drive, Halfway House,
Ext 111
P.O. Box 7934, Midrand 1685
Tel. +27 (0) 1131 58 286
Fax +27 (0) 1131 58 261
E-Mail: info@dclsa.co.za

Switzerland

GEZE Schweiz AG
Bodenackerstrasse 79
4657 Dulliken
Tel. +41 (0) 62-285 54 00
Fax +41 (0) 62-285 54 01
E-Mail: schweiz.ch@geze.com

Turkey

GEZE GmbH Türkiye - İstanbul
İrtibat Bürosu
Ataşehir Bulvarı, Ata 2/3
Plaza Kat: 9 D: 84 Ataşehir
Kadıköy / İstanbul
Tel. + 90 (0) 21 64 55 43 15
Fax + 90 (0) 21 64 55 82 15
E-Mail: office-turkey@geze.com

Ukraine

GEZE Ukraine TOV
ul. Viskoznaya, 17,
Building 93-B, Office 12
02094 Kiev
Tel./Fax +38 (0) 44 501 22 25
Tel. +38 (0) 44 499 77 25
E-Mail: office-ukraine@geze.com

United Arab Emirates/GCC

GEZE Middle East
P.O. Box 17903
Jebel Ali Free Zone
Dubai
Tel. +971 (0) 4-88 33 112
Fax +971 (0) 4-88 33 240
E-Mail: geze@emirates.net.ae

United Kingdom

GEZE UK Ltd.
Blenheim Way
Fradley Park
Lichfield
Staffordshire W513 8SY
Tel. +44 (0) 1543 44 30 00
Fax +44 (0) 1543 44 30 01
E-Mail: info.uk@geze.com

GEZE REPRESENTATIVE